




Installation Guidelines

Z Clip System for Installing Glass, ACM or Phenolic Panels

For glass, ACM or HPL phenolic panels where substrate cannot be attached with a screw

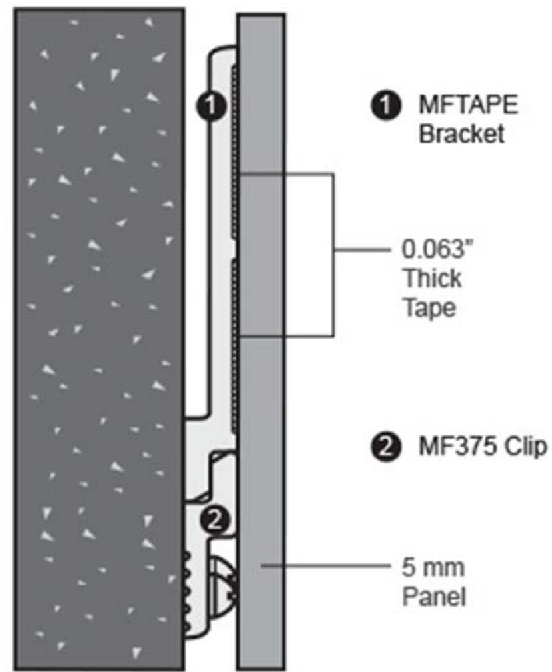

- 1/2 inch clearance required between the top of the panel and the ceiling
- 6063-T6 Aluminum
- (2) Strips of 3M VHB Tape Pre-Applied for Peel and Stick Application
- Easily Used for Mounting Phenolic, ACM, Aluminum and back painted Glass Panels
- The MFTAPE can also be used with unpainted glass panels by substituting a primer and a tape variation (please inquire for pricing)
- Each 1 ft of Clip is rated for 7.5 pounds of shear strength using a 5xsafety factor
- 3M has a technical article [here](#) on how to prepare your panel for tape adhesion
- Suitable for Interior Applications (Examples in 3M Design Guide)
- Pairs with MF375 Clip for Material Savings
- Redesign of Clip to optimize adhesion with tapes
- Clip can also be purchased without the 3M tape for use with your preferred vendor of glazing tape

General Glass International

101 Venture Way | Secaucus, New Jersey | 07094-1808
800.431.2042 | T: 201.553.1850 | F: 201.553.1851 | generalglass.com

SEE WHAT
GLASS
CAN DO



MFTAPE	
Material	Aluminum
Stock Clip Size	2 Inch
Stock Continuous Length	72 Inch, 144 Inch
Custom Lengths Available	Any
Lift Off (1)	3/8 Inch
Projection (2)	.293 Inch
Availability	Same Day Shipping

- (1) The “Lift-Off” is the amount you need to raise the panel over its resting height to mount the panel.
(2) The “Projection” is the distance that the panel sits out from the wall.

